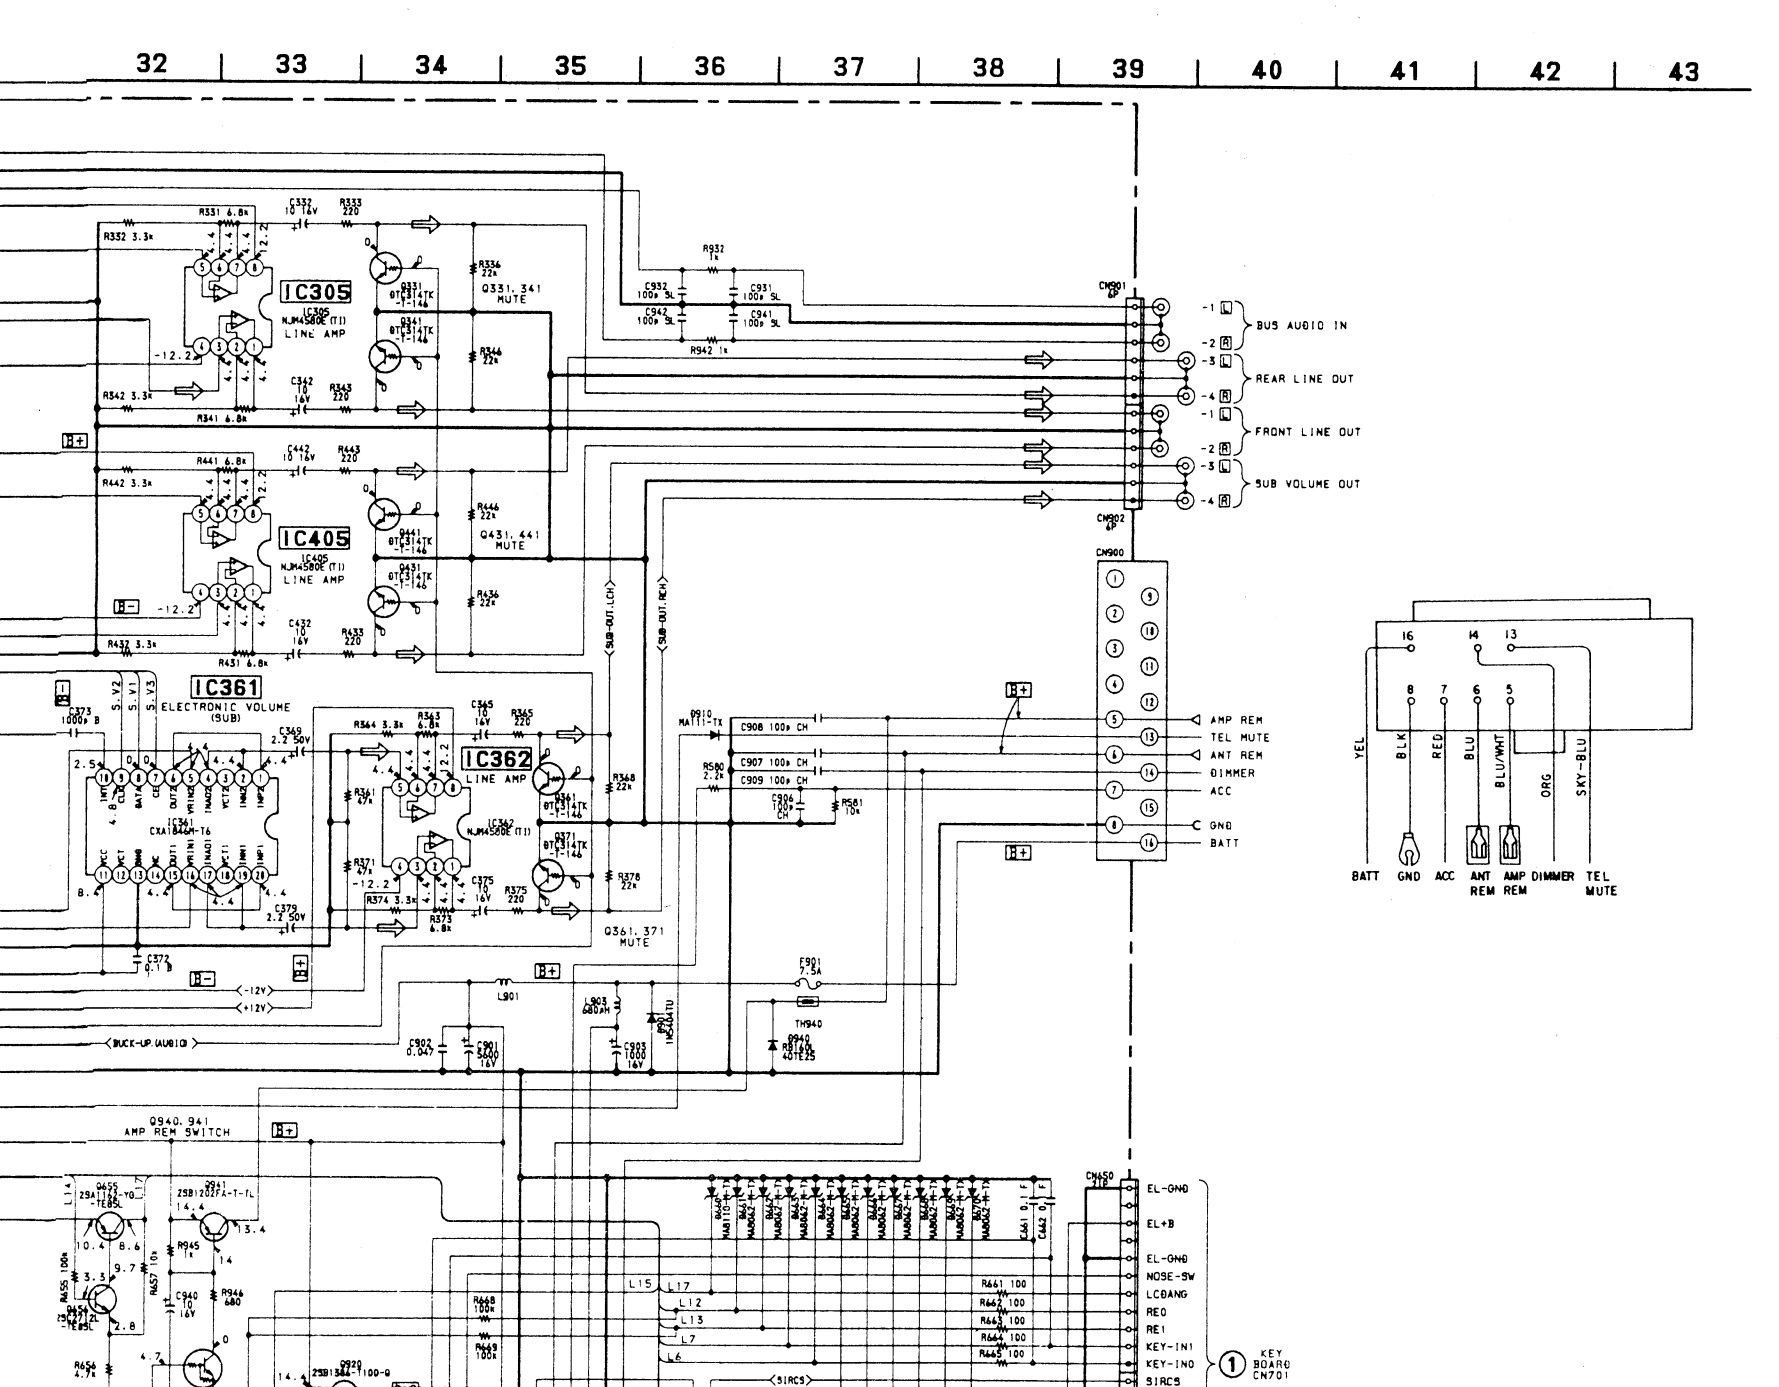
32
33
34
35
36
37
38
39
40
41
42
43
IC305
LINE AMP
IC405
LINE AMP
IC361
ELECTRONIC VOLUME (SUB)
IC362
LINE AMP
Q331, 341 MUTE
Q431, 441 MUTE
Q361, 371 MUTE
Q940, 941 AMP REM SWITCH
CN901
CN902
CN900
CN450
BUS AUDIO IN
REAR LINE OUT
FRONT LINE OUT
SUB VOLUME OUT
AMP REM
TEL MUTE
ANT REM
DIMMER
ACC
GND
BATT
BUCK-UP (AUDIO)
KEY BOARD CN701
EL-GND
EL+B
NOSE-SW
LCDANG
RE0
RE1
KEY-IN1
KEY-IN0
SIRCS
YEL
BLK
RED
BLU
BLU/WHT
ORG
SKY-BLU
BATT
GND
ACC
ANT REM
AMP REM
DIMMER
TEL MUTE